

PART #	ENG #	NOMENCLATURE
5047T76P03	CF34	Housing-Scavenge Tube
5047T76P04	CF34	Housing-Scavenge Tube
5047T76P05	CF34	Housing-Scavenge Tube
5047T61G01	CF34	Tube-Vent
4060T62G02	CF34	Tube-Scavenge
5047T76P01	CF34	Housing-Scavenge Tube
4020T61G01	CF34	Tube-Scavenge
40487T78G01	CF34	Tube-Oil
4020T45G01	CF34	Tube-Air
5047T54G01	CF34	Tube-Rear
5023T52G01	CF34	Tube-Sump
4901T95G01	CF34	Tube-Shielded
4027T74G02	CF34	Tube-Air
4027T74G03	CF34	Tube-Air
5054T31G01	CF34	Tube-Shielded
4071T11G04	CF34	Tube-Oil
4071T11G05	CF34	Tube-Oil
4071T11G06	CF34	Tube-Oil
4027T37G01	CF34	Tube-Oil
4027T37G02	CF34	Tube-Oil
6052T40G01	CF34	Tube-Air
4027T74G02	CF34	Tube-Air
4027T74G03	CF34	Tube-Air
5054T31G01	CF34	Tube-Drain
4071T11G04	CF34	Tube-Oil
4071T11G05	CF34	Tube-Oil
4071T11G06	CF34	Tube-Oil
4027T37G01	CF34	Tube-Oil
4027T37G02	CF34	Tube-Oil
5071T46P01	CF34	Tube-Breather Air
5024T06G01	CF34	Tube-No. 6 Bearing Scavenge
4017T84G01	CF34	Tube-PTO Nozzle
6012T90G01	CF34	Tube-Front Frame PTO
6031T26G01	CF34	Manifold-PTO Oil
6031T26G04	CF34	Manifold-PTO-Oil
6031T26G05	CF34	Manifold-PTO-Oil
4096T72P02	CF34	Hose/Tube-Fuel
4096T72P01	CF34	Hose/Tube-Fuel
4104T07G01	CF34	Tube-Flowmeter to Manifold
3049T26P01	CF34	Tube-Flowmeter to Manifold

PART #	ENG #	NOMENCLATURE
J1174G0100AB	CF34	Hose-Fuel Filter
4104T02G01	CF34	Tube-Fuel Thermal
J1174F0073AB	CF34	Hose-Thermal
J1174F0182AB	CF34	Hose-Assembly
J1176F0165-350AB	CF34	Hose-Assembly
J243F0165-350CA	CF34	Hose-Assembly
5071T74G01	CF34	Tube-Thermal
5085T60G01	CF34	Tube-Heat Exchanger
5079T43P02	CF34	Hose-Tube Assy Fuel
J1175D0244AA	CF34	Hose-Assy AFT
J242D0244DA	CF34	Hose-Assy AFT
J1175C0264AA	CF34	Hose-Assy AFT
J242C0264DA	CF34	Hose-Assy AFT
J242C0264BA	CF34	Hose-Assy AFT
5038T21G01	CF34	Tube-Actuator
5038T30G01	CF34	Tube-Fuel Actuator
5054T53P01	CF34	Hose-Actuator
5054T53P02	CF34	Hose-Actuator
5054T54P01	CF34	Hose-Actuator
5054T54P02	CF34	Hose-Actuator
J1175C0264AA	CF34	Hose-Assy
J242C0264DA	CF34	Hose-Assy
J242C0264BA	CF34	Hose-Assy
J1175D0244AA	CF34	Hose-Assy
J242D0244DA	CF34	Hose-Assy
6078T84P03	CF34	Hose-Tube Assy Fuel
6078T85P02	CF34	Hose-Assy Main Fuel
4047T42G01	CF34	Tube-Main Fuel
4047T42G02	CF34	Tube-Main Fuel
4147T83G01	CF34	Tube-Main Fuel
4096T23G01	CF34	Tube-Drain Fuel
4096T22G01	CF34	Tube-Main Fuel
6078T85P02	CF34	Tube/Hose Assy T2
5086T41G01	CF34	Tube/Hose Assy T2
6078T84P03	CF34	Tube/Hose Assy T2
5086T40G01	CF34	Tube/Hose Assy T2
5086T40G02	CF34	Tube/Hose Assy T2
4047T42G01	CF34	Tube-Main Fuel
4047T42G02	CF34	Tube-Main Fuel
4147T83G01	CF34	Tube-Main Fuel

PART #	ENG #	NOMENCLATURE
4096T20G01	CF34	Tube-T2 Sensor
4096T21G01	CF34	Tube-T2 Sensor
5047T75G01	CF34	Tube Assy P3
5047T75G01	CF34	Tube-Assembly
5054T24G01	CF34	Tube-Assy Air
5071T75G01	CF34	Tube-Assy Air
6078T77G01	CF34	Tube-Pressure Valve
5071T84G01	CF34	Tube-Air Stage 7
5047T70G01	CF34	Tube-Regulator Valve
6078T76G01	CF34	Tube-Valve
4096T54G01	CF34	Tube-Stage 7
5071T83G02	CF34	Tube-Stage 7
5071T76G01	CF34	Tube-Regulator Valve
5047T68G01	CF34	Tube-Sump Vent
5054T18G01	CF34	Tube-C Oil
4044T31G01	CF34	Tube-C Oil
5071T94P02	CF34	Tube-Assembly
5071T94P01	CF34	Tube-Assembly
J1175D0085AB	CF34	Hose Assembly
J242D0085BA	CF34	Hose Assembly
5023T81G01	CF34	Tube-Assembly
5050T91P01	CF34	Tube-A Sump
5085T10G01	CF34	Hose/Tube Heat
4096T90G01	CF34	Tube-Heat Exchanger
5085T05P02	CF34	Tube/Hose Oil
5125T42P01	CF34	Tube/Hose Oil
3065T29P03	CF34	Tube/Hose Oil
5085T05P01	CF34	Tube/Hose Oil
4096T62G01	CF34	Tube-Main Oil
5071T81P03	CF34	Tube/Hose Oil
5071T81P04	CF34	Tube/Hose Oil
5079T26P01	CF34	Hose/Vent Oil
6052T16G01	CF34	Tube-C Pump Oil
5071T85P02	CF34	Tube-C Scavenge Oil
5071T85P01	CF34	Tube-C Scavenge Oil
5054T52P01	CF34	Hose-Assy
5054T52P02	CF34	Hose-Assy
4085T92P01	CF34	Hose-Assy
5071T18G01	CF34	Tube-Scavenge
5071T18G01	CF34	Tube-Scavenge

PART #	ENG #	NOMENCLATURE
5071T18G02	CF34	Tube-Scavenge
5071T82P03	CF34	Hose-Oil
5071T82P04	CF34	Hose-Oil
5054T25G01	CF34	Tube-Oil
J1176E0104-135AB	CF34	Hose-Assy
J243E0104-135BA	CF34	Hose-Assy
5071T86P02	CF34	Tube/Hose Scavenge
5071T86P01	CF34	Tube/Hose Scavenge